


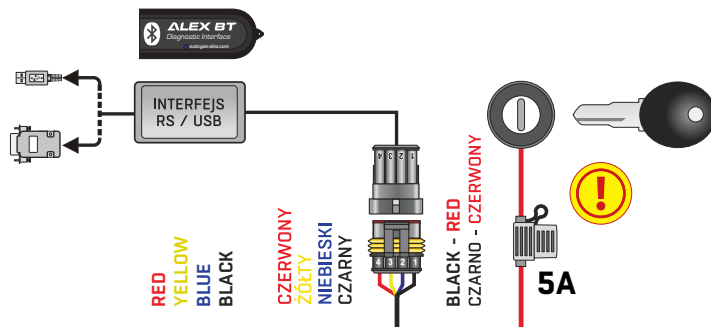

DO NOT CONNECT THE WIRE TO THE IGNITION COIL CONTROL CIRCUIT, AS THIS MAY DAMAGE THE ELECTRONICS. IF THE ELECTRONICS ARE DAMAGED DUE TO OVERVOLTAGE, WARRANTY CLAIMS WILL NOT BE HONORED.

Schemat podłączenia instalacji LPG/CNG OPTIMA NANO OBD
LPG/CNG OPTIMA NANO OBD installation connection diagram